

Stow N' GO R.V. Water Conditioner

Removes water hardness , Chlorine, Taste and Odor!!!

Simple Connection

Connects using standard garden hose fitting.

Poly Glass Tanks

Tanks constructed of a high-density polyethylene inner shell, thermal wound with fiberglass. These tanks are totally non-corrosive!

Compact Space Saving

Purpose built for Recreational Vehicles

Limited Lifetime Warranty

On pressure tanks and brine tanks, and a full 3 year warranty on parts (Control valve & brine tank internals).

Locally Manufactured by:

Water Tec of Tucson Inc.

From the highest quality components at our facility in TUCSON, ARIZONA.

Over 40 Year Reputation

Of immaculate customer service satisfaction, integrity and quality!



**MADE IN
THE U.S.A.**

Authorized Distributor:

RV Water Conditioner Regeneration Procedure:

Once Water Conditioner is not providing soft water (as shown by test kit) perform the following:

1. Turn water off before water conditioner.
2. Release water pressure by turning on faucet after water conditioner.
3. Loosen filter housing and remove filter cartridge.
4. Add salt to ½ level in filter housing.
5. Replace filter housing sump on to filter housing head.
6. Rotate filter house 180 degrees (upside down).
7. Disconnect hose from R.V.
8. Turn water to water conditioner back on.
9. Turn on water faucet after water conditioner to about ½ gallon per minute.
10. Continue to rinse salt through water conditioner and faucet till salt is gone.
11. 7-10 minutes after salt is gone test water for softness. Once water is soft turn of water, and release water pressure.
12. Loosen filter housing and re-install filter cartridge.
13. Rotate filter housing 180 degrees (right side up).
14. Re-connect to R.V.
15. Turn water on and check for leaks.



Normal



Regen

